


SAGE LIVING HOME & DÉCOR PRIVATE LTD

# BIDO CHANDELIER

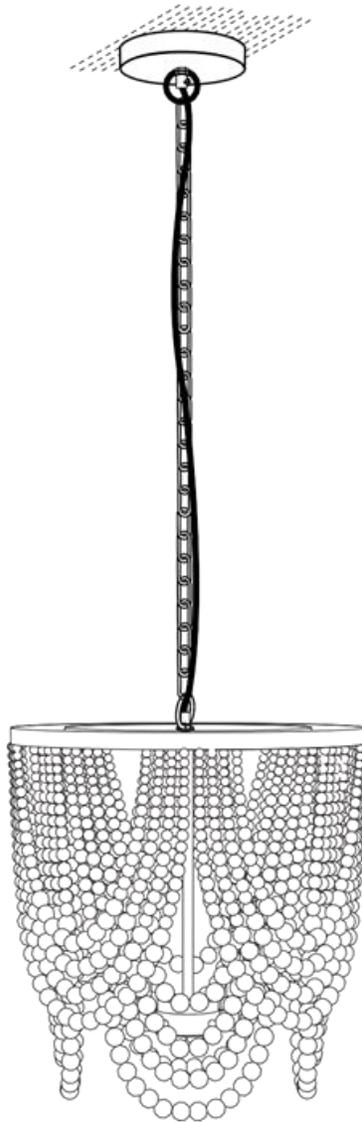

## ASSEMBLY INSTRUCTIONS

- This product requires 4, type B E14 bulbs of 25W each. Bulbs are not provided.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid any accidentally discarding small parts or hardware.
- Keep the parts on a carpet/ bubble wrap/ soft cloth while assembling to avoid scratches.
- Kindly keep any sharp surfaces or objects away from the assembly area such that they do not scratch or damage the product.
- Assemble in a clean area.
- Kindly use gloves while assembling.
- All wires are connected. When unpacking, be careful not to pull wires, as a bad connection may result.
- Shut off the power to the main electric circuit supply before beginning work. Lockout the circuit or the panel so the power can not be turned on while you are working. If handled improperly, electricity poses personal injury and fire hazards.
- Always turn off the fixture and allow it to cool before replacing the light bulb.
- Do not touch or look directly at the bulb when the fixture is illuminated.
- Keep flammable materials away from the lit bulb.


### PARTS INCLUDED:

No.	Item	Description	Qty
1		Ceiling Cap	1
2		Type B Bulb	Not included
3		Bracket	1
4		Large Screw	2
5		Small Screw	2


### TOOLS NEEDED




**STEP:-1** Connect the Blue Wire to the fixture's Blue Neutral Wire. Connect the Brown wire to the fixture's Brown-Live Wire. Fasten each connection together with a plastic wire connector.

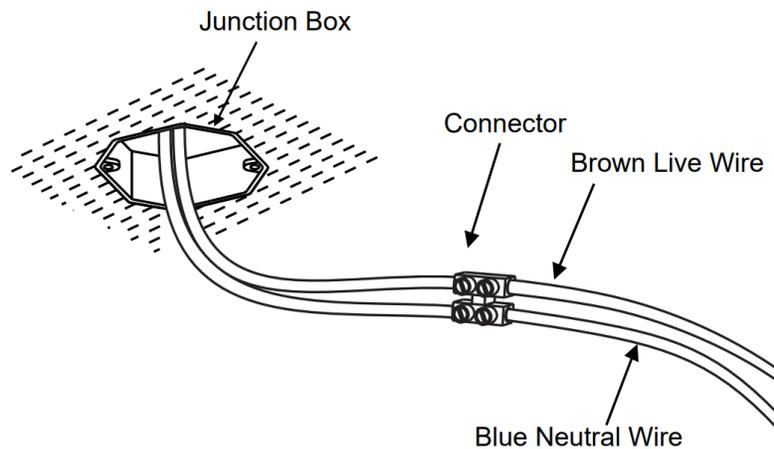

**STEP:-2** Align holes on the Bracket with the junction box and secure with the large screw

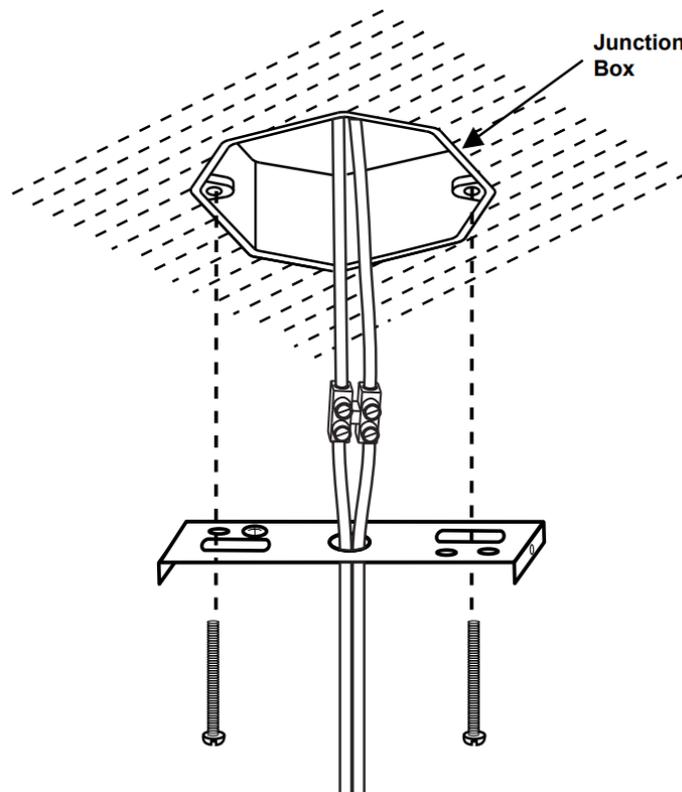

**STEP:-3** Place the ceiling cap over the bracket such that side holes are aligned of the ceiling cap & bracket. Insert the small screw into side holes and tighten with the screwdriver.

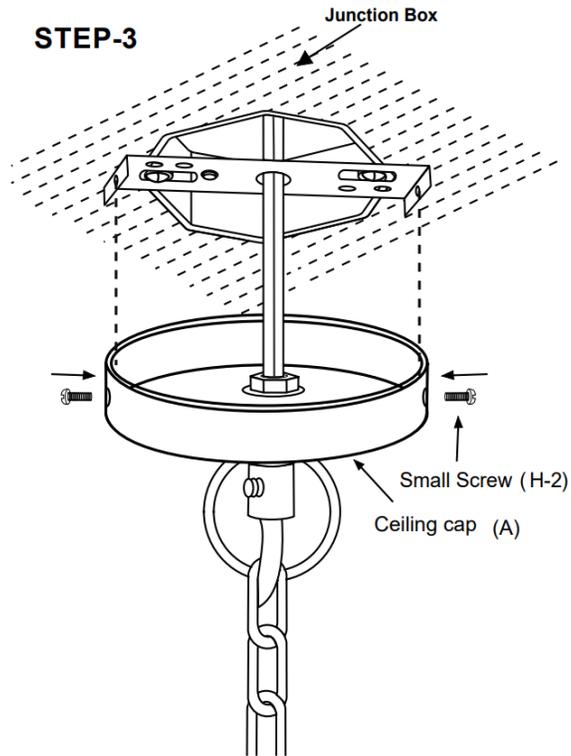

**STEP:-4** Insert the bulb into the socket and rotate in the clockwise direction to secure.



**STEP:-5** Ready to use.

