





SAGE LIVING HOME & DÉCOR PRIVATE LTD

CONCENTRIC CONVEX MIRROR

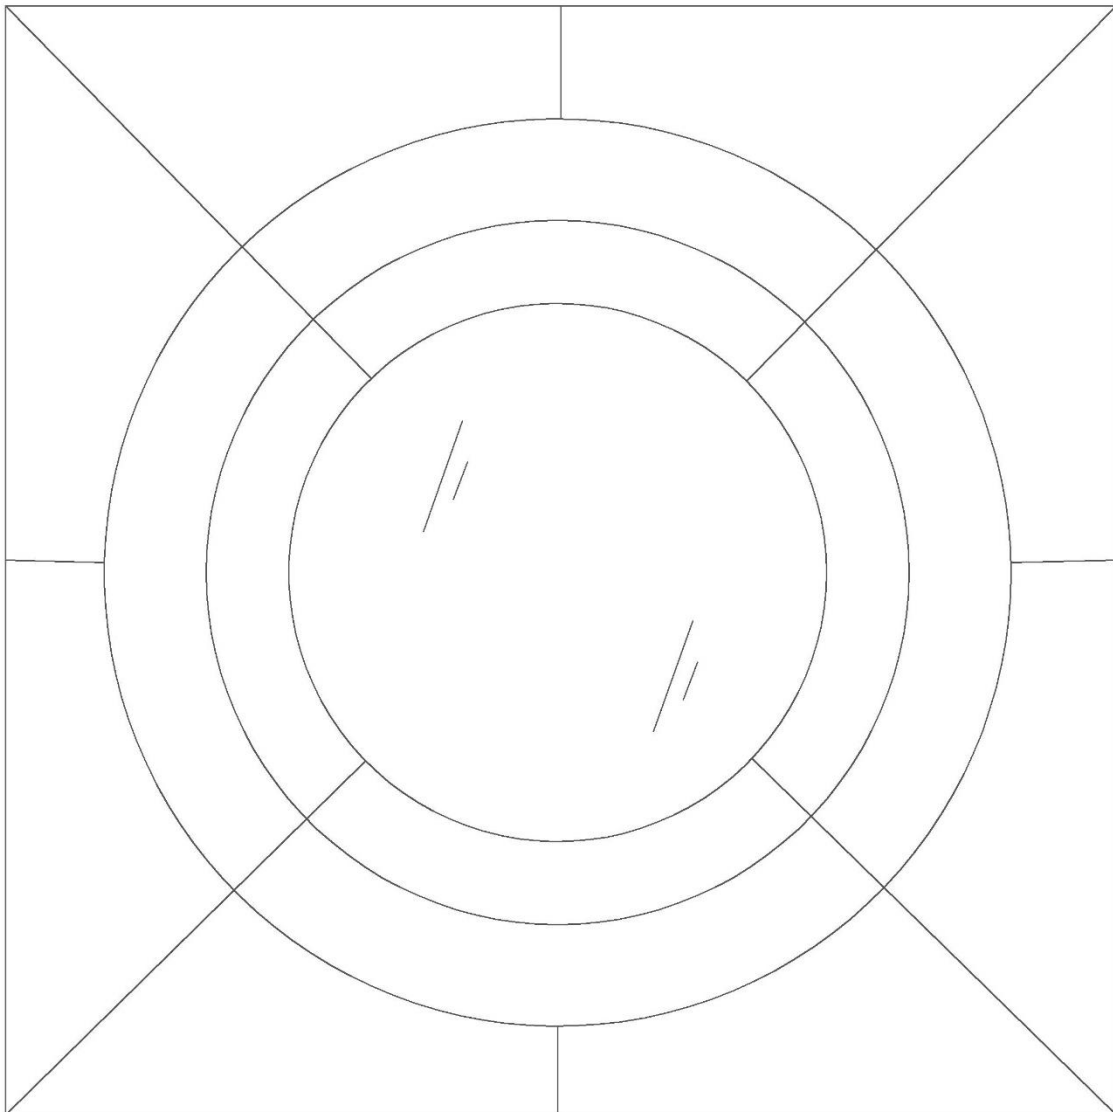

ASSEMBLY INSTRUCTIONS

- *Do not dispose any packaging or contents of the shipping carton until assembly is completed to avoid any accidentally discarding small parts or hardware.
- * For safety and ease of mounting, installation is recommended using two people.

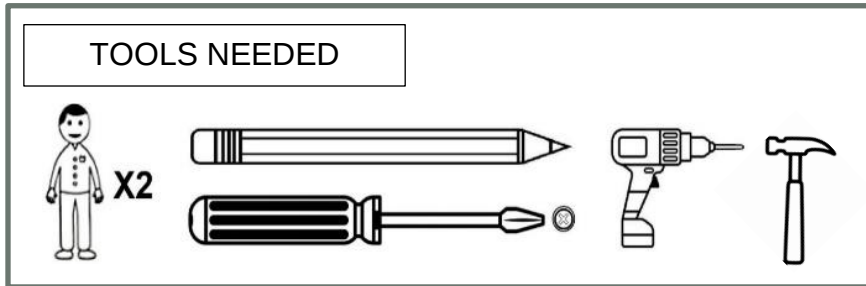

Hardware Included:

- (2) Plastic Anchors
- (2) Metal Screws



MOUNTING INSTRUCTIONS

1. Find your desired location for hanging. Place the wall mounting bracket on the wall and make sure the mount is positioned straight. Mark out all the holes with a pencil.
2. Using a drilling machine make holes at the marked points. The holes must be slightly smaller than the plastic anchors provided. With the help of a hammer tap the plastic anchors into the hole.
3. Now take the wall mounting bracket, a screwdriver, and the provided screws and proceed to mount it on the wall.
4. Hang the mirror by inserting the bracket attached behind the mirror into the wall bracket.

